

Hans müller *Berlin*

EASY INSTALLATION INSTRUCTIONS


STEP 1

Remove your old existing shower head by turning it in a counter clockwise direction.



STEP 2

Remove any remnants of the old plumber's tape.

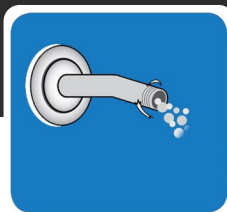

STEP 3

Wrap plumber's tape few times clockwise around the thread on the end of the shower arm.



STEP 4

Screw the Q Main Filter onto the shower arm in a clockwise direction. Hand tighten only.




STEP 5

Place a washer inside the 3-Way Diverter connector (included). Screw the diverter onto the outlet of the Q Main Filter and hand tighten.



STEP 6

Attach the hexagonal end of the hose to the side outlet of the diverter.

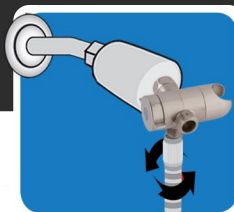

STEP 7

Attach the round end of the hose to the handheld shower and hand tighten. Place the handheld shower in the wall bracket (included).



STEP 8

Place a washer (included) inside the "8 shower head screw it onto the bottom part of the diverter.



STEP 9

Enjoy your new Hans Muller filtered shower.

Adding a filter will normally lower your shower head. Shower height extension arms are available on Amazon.

Combine the softened water of the Hans Muller Shower Combo with any hair conditioner for an enhanced effect.